
SSi

BAZOOKA PROBE™

U.S. Patent No. 5,635,044

USER'S MANUAL

*Super Systems Inc help desk:
1-800-666-4330*

TABLE OF CONTENTS

	Page
INTRODUCTION	3
FEATURES	4
SPECIFICATIONS	5
INSTALLATION	6
MAINTENANCE	7
TROUBLESHOOTING	8
CONTROL SYSTEMS	9
WARRANTY	10
REVISION HISTORY	11

INTRODUCTION

Thank you for selecting the **Bazooka Probe™** for your atmosphere control applications.

The **Bazooka Probe™** represents a *dramatic* change in sampling oxygen sensor technology. It has been designed primarily for use in measuring systems as applied to endothermic generators, but is also useful in applications where high temperatures may have adverse effects on both life and performance, such as sintering.

The **Bazooka Probe™** is a descendant of the original **Gold Probe™** with the same patented electrode construction. It is the product of a team of design and application engineers, each with over twenty years of atmosphere control experience. The **SSi** engineering team has long recognized that the sensor is the most critical component in the atmosphere control system and has traditionally been the weakest link. Now, reliability, repeatability, and accuracy are assured with the inclusion of the **Bazooka Probe™**.

FEATURES

The Bazooka channels a small sample to the patented probe measuring point, thence into an integral micro isolating well which then vents the sample to the combustion chamber of the generator, or the interior hot wall, in the case of furnaces.

There is no cool area where soot can be deposited.

There is a tiny buffering volume separating the probe from the sample exit, so response is fast.

Flow restriction is negligible, so a sampling pump is not usually necessary.

With a low initial price and a liberal warranty, the Bazooka can also be rebuilt and re-certified for a modest investment.

The Bazooka is a direct replacement for most existing sensors.

The 1" NPT sealing gland is easily plumbed into existing installations.

SPECIFICATIONS

Useful %C range - 0-100°F DP (0.1 to 1.6% C)

Temperature range - 1350° to 1700°F

Stability +/- 1 mVdc

Impedance - less than 10 k ohms @ 1700°F

Useful output - 0 to 1250 mVdc

Length 22.95"

Weight 2.6 lbs

Insertion 16.25" max

Mounting - 1" NPT

Sheath dia. - 0.84"

INSTALLATION

Fig. 1 shows a suggested installation utilizing a 1" coupling welded to the generator wall. The hole through the insulation must be at least 1 ¼" in diameter and axially aligned with the coupling to avoid interference with the **Bazooka™ well** which has an O.D. of 1.050". For existing installations with larger fittings, use a bushing to reduce the diameter to the 1" female required by the probe gland. Provide for about 1 SCFH of reference air, 6-10 SCFH of burnoff air, and 2 - 3 SCFH of sample from the endo manifold or sample from individual retorts. The probe should be inserted to a depth such that, at equilibrium, the probe temperature is between 1400°F and 1700°F, preferably at 1550°F. Insertion or removal must be limited to 2" per minute to avoid thermal shock.

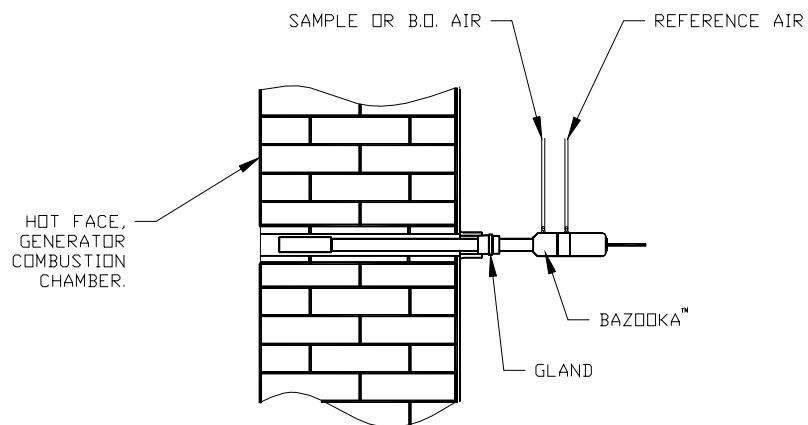


FIG.1- INSTALLATION

MAINTENANCE

Maintenance of the **Bazooka™** probe follows the same general rules as for the Gold Probe™/ Periodic burnoff is required to prevent buildup of carbon in the sensing region of the probe. Simple systems to provide the appropriate probe conditioning programs are available from **SSI**. For generators, the normal burnoff cycle is 24 hours when operating at 40° dew point. Lower set points will usually require more frequent burnoffs. Burnoff frequency can be determined by the time required to burn off to a sensor reading near zero mV.

Typical burnoff times are two minutes at 6 cfh of burnoff air with 1 ½ minutes allowed for probe recovery. Sample flow rates (from the Rx gas manifold) are typically 2 SCFH.

TROUBLESHOOTING

If problems are encountered in operation, it is necessary to verify the integrity of the probe and its supporting equipment, the control instrument, signal transmission lines, or the process, including the controlling elements, such as solenoid or motor driven valves. If there is disagreement between the probe's indicated value and dew point analysis, the following simple tests can be conducted to eliminate the probe as a source of problems. The probe must be at temperature and under stable control.

- Reference air flow 0.5 to 1.0 CFH
- Sample flow 2.0 to 3.0 CFH
- Check the probe resistance. It should be less than 10 kilohms. If not, burn off the probe and retest.
- Test the speed of response after switching the control instrument to manual control. First, record the mV output. Then short the probe for 5 seconds, remove the short and measure the time required to return to within 1% of the original reading. If it exceeds 30 seconds, conduct a burnoff and repeat the test after the reading has stabilized.
- Turn off the reference air supply for three minutes. Read the probe millivolts, and then turn the air back on. If the reading changes (immediately) by more than 25 mV, replace the probe. The substrate is cracked or broken.

If these fundamental tests show that the probe is functional, check the following possible reasons for disagreement:

- Contamination of the reference air supply with combustibles
- Air leak into the sample line. Check with a dew pointer at the probe entry
- Faulty insulation in the signal lines
- Instrument out of calibration. Check with a DVM or calibrator that the instrument reading matches the open loop probe or temperature reading. When all else fails, call the **SSI** Gold Probe team at (800) 666-4330

CONTROL SYSTEMS

If you are using the **Bazooka Probe™** for the first time as a replacement in an existing system, you will find that the performance is as good as or better than you are accustomed to. If you plan on a new system to upgrade your controls, you can rely on Super Systems to supply you exactly what you need, from the simplest on/off controls to the most sophisticated programmable PID control with computer interface.

Fig 2. Shows a typical generator control system with a separate conditioning box available as a standard system from Super Systems. **SSi** is positioned to provide a “plug and play” system that is operator friendly. Components such as valves, flow meters, cable and tubing are generally ordered with each system so that these items are available when the system is installed. For details, please contact **SSi** or your **SSi** representative.

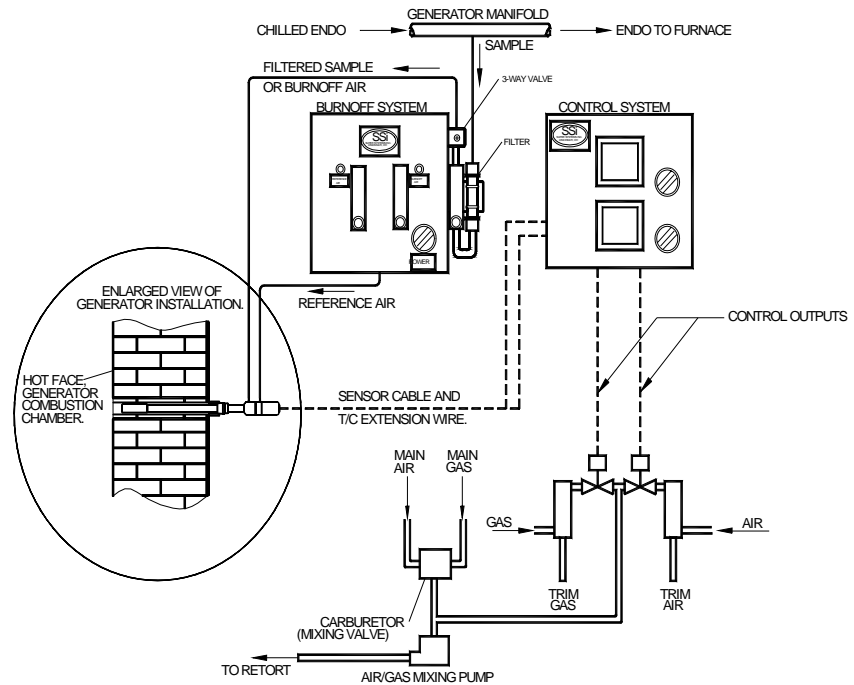


FIG. 2 ENDOTHERMIC GENERATOR BAZOOKA SAMPLING AND CONTROL SYSTEM WITH CONDITIONING.

WARRANTY

Super Systems, Inc. (SSi) as manufacturer of the **Bazooka Probe™**, warrants it for a period of one year to be free from defects in material and workmanship under normal use and service. **SSi's** obligation under this warranty is limited to repairing or replacing, at its option, the sensor described herein, should failure occur within the warranty period. The warranty period shall commence on installation of the sensor as certified by receipt of the postage-free Registration Card accompanying the sensor. If premature failure occurs, the sensor along with the Warranty Claim Report must be returned in the complete, original packaging to **SSi**. Upon receipt, **SSi** will conduct an examination as to the cause of failure, at which time appropriate action will be taken.

For sensors operating at elevated temperatures, the warranty period is prorated such that full warranty is granted for operation below 1850F; six months warranty for temperatures between 1850F and 1950F; three months warranty between 1950F and 2050F, and no warranty above 2050F.

There are no warranties, expressed or implied, by the distributors or representatives for the **Bazooka Probe™**, except the expressed warranty against defects described above. There will be no applicable warranty in the event of breakage resulting from thermal or mechanical shock. Additionally, there will be no applicable warranty for a probe which has been subject to misuse, negligence or accidental damage.

This warranty cannot be honored unless the Registration Card is received at **SSi** prior to the Warranty Claim Report, and the use and installation is accomplished according to the techniques and procedures described in the **Bazooka Probe™** Manual. **SSi** shall in no way be liable for special or consequential damages related to the use of this sensor.

REVISION HISTORY

Rev.	Description	Date
-	Initial Release	04-24-2001
A	Added Revision History	07-11-2001
A_01	Corrected grammatical and spelling errors	05-24-2002
A_02	Address & general update	04-25-2005